

## USAGE INSTRUCTIONS

- On / Off Function: Press power switch
- Change Modes: Rotate the rotatry selector switch

## LOW BATTERY INDICATOR

- 30% depleted the power switch will turn "RED"
- 10% depleted the power switch will FLASH "RED"

## CHARGING INSTRUCTIONS

- Plug AC charger into power supply.
- Attach magnetic end of charging cable to the charging port on flashlight. (once attached the Battery Indicator will turn "RED")
- When charging is complete, the indicator will change from "RED" to "BLUE"

## FEATURES & SPECIFICATIONS


- 3 Different brightnes modes in each size configuration
- Machined from aircraft grade aluminum with type III anodized finish
- XTreme Knurling of exterior body for comfortable and secure grip
- Digital circuit-control technology monitors light output for consistent operation
- Precision engineered optical lens produces focused and proportioned light
- Battery polarity protection

## Specifications:

LED Type:	CREE XHP70 White LED
Battery:	Custom 2 Cell 32650 (6500 mAh) Rechargeable Li-Ion
Size:	Length: 121.5 mm Body Diameter: 14.5 mm
Weight:	30g (without battery)

## Illumination Functions:

	Low	Medium	High	Strobe	S.O.S.
Output	155 Lumens	610 Lumens	4200 Lumens	1820 Lumens	1820 Lumens
Runtime	56 hrs	13hrs	3.78 hrs	6.4 hrs	6.4 hrs

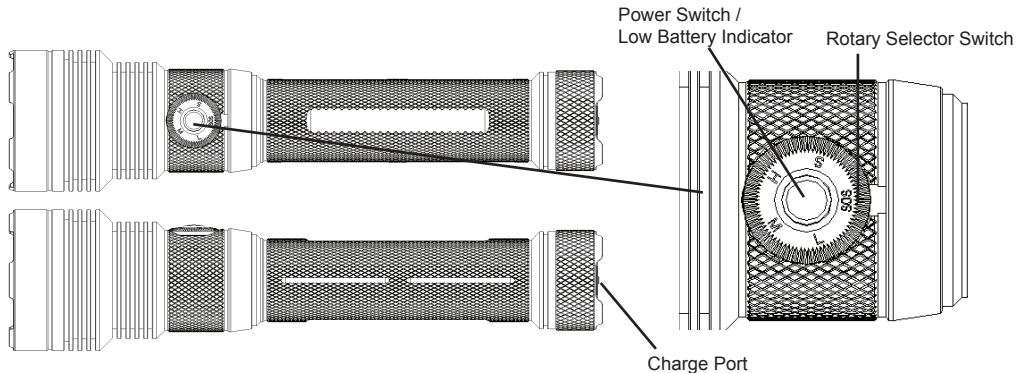

# PATROLMAN LE-10X®

**USER MANUAL**

## **DISCLAIMER**

- After long periods of use on the highest setting, the surface area may get hot. Please use caution when using the flashlight in a constant high brightness level. It is recommended to let the flashlight cool down to prevent any injury.
- High intensity light is harmful to human eyes. This product is not meant to be handled by children under the age of 18 without adult supervision.
- Use the highest quality, protected-circuit batteries to insure maximum performance and safety. Consult with the manufacturer regarding any questions or concerns.
- PowerTac's liability is voided if the light is not used in a proper manner or if modified.
- PowerTac reserves the right to change the design and/or specifications of all PowerTac products without prior notice.
- Please do not change batteries at dangerous locations such as gas stations. Batteries must only be changed or removed when light is off.
- Do not use or attempt to recharge a disposable CR123 battery! Do not throw the flashlight into a fire as an explosion may occur.

## **Maintenance**

Every 3 months, threads should be wiped with a clean cloth followed by a thin coating of silicon-based lubricant.

## **THE POWERTAC NO-HASSLE LIFETIME WARRANTY**

Please visit our website at [powertac.com](http://powertac.com) for full warranty policy.

## **WARRANTY DISCLAIMER**

The above warranty is exclusive, and to the extent permitted by applicable laws, shall be in lieu of all other warranties, express or implied, including, without limitation, any warranty of merchantability or fitness for a particular use or purpose. PowerTac disclaims any and all liability for product malfunctions, physical injuries, or property damages that result in whole, or in part, from the criminal, negligent, or improper use of the product, or from modifications or alterations thereto. In no event shall PowerTac be liable for any incidental, special, or consequential damages relating to the purchase, use, or performance of any PowerTac product.

## **WARRANTY CLAIMS**

Please go to [www.powertac.com/warranty](http://www.powertac.com/warranty) and follow instructions.

© 2019 POWERTAC USA, INC. ALL RIGHTS RESERVED

**WWW.POWERTAC.COM**